


120cm Mirrored Sliding Door Wardrobe

White/ Light Oak/ Medium Oak

Assembly Instructions

!!Please take time to read and follow these instructions carefully!!

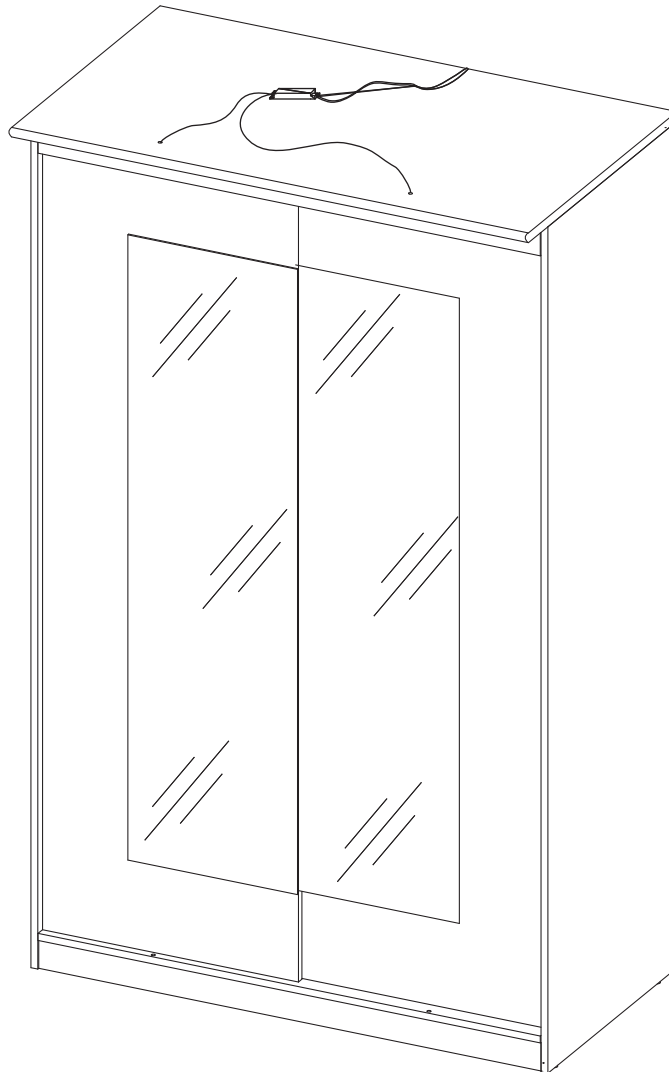

Hello,

Thank you for choosing this item of furniture. To ensure that you get the most from your furniture here are a few safety tips and helpful hints from the professionals.

Safety

- Keep children and animals away from the assembly area.
- This furniture contains small parts that could cause choking if swallowed.
- Where applicable ensure the unit is fixed to a wall.
- Ensure all packaging is disposed of responsibly.

Helpful Hints



- Take time to read through the Assembly Instructions.
- Clear as much space as possible in the room you intend to use the furniture in. Assemble the furniture in that room, moving built furniture between rooms is hard work.
- Open the fittings bag into a washing-up bowl or other container to stop any small parts being lost.
- Check all fittings and panels against the parts list to ensure that you have everything before you start.
- Check that you have the recommended tools for assembly. The use of power tools is NOT advised.
- Building is NOT a race. Take your time. For larger items take a break after about 60mins then start again refreshed.

Care and maintenance









- To clean wipe with a slightly damp clean cloth.
- Periodically check there are no loose screws or fittings.








Enjoy your furniture.

PART	SIZE	QTY		
		BOX 1	BOX 2	BOX 3
1	1924x600x16		1	
2	1924x600x16		1	
3	1843x470x16		1	
4	1200x690x22	1		
5	1166x70x16	1		
6	575x467x16	1		
7	575x467x16	1		
9	1166x599x16	1		
10	1166x65x16	2		
11	1821x594x16			1
12	1821x594x16			1
13	1853x588x3		2	

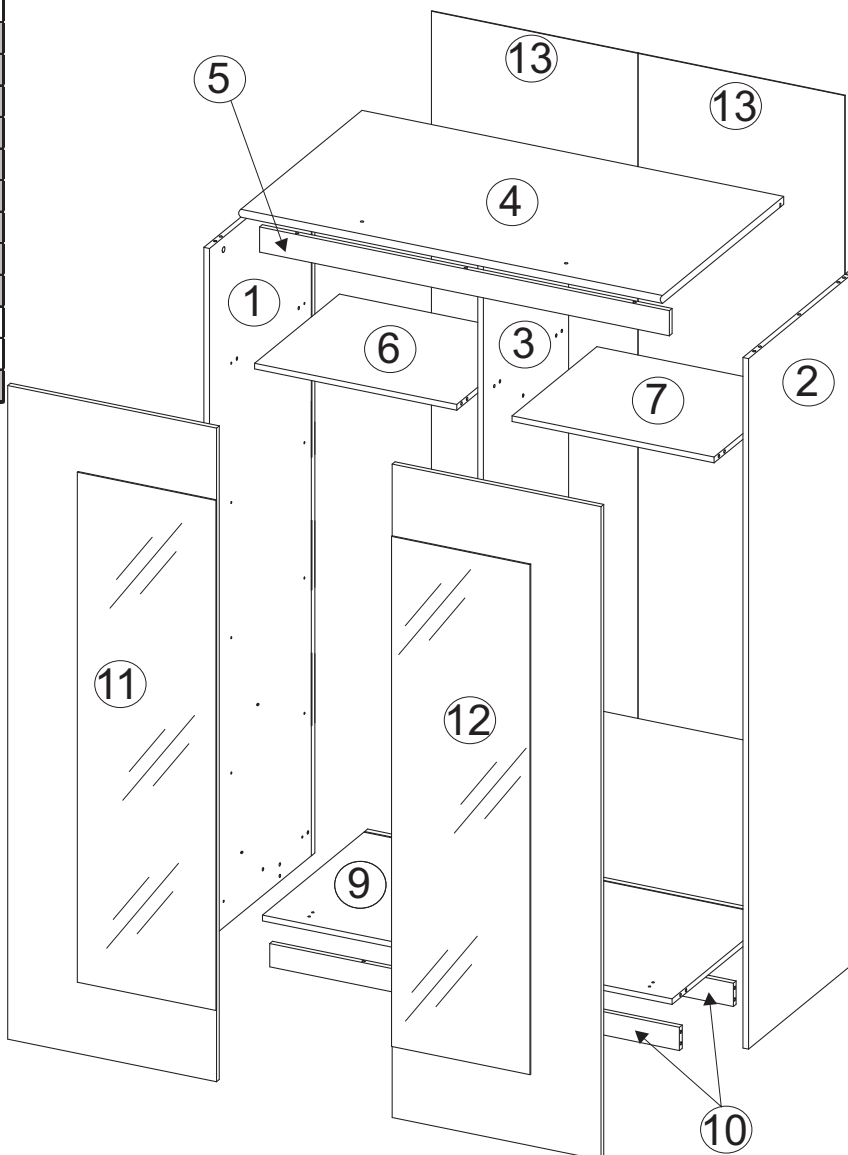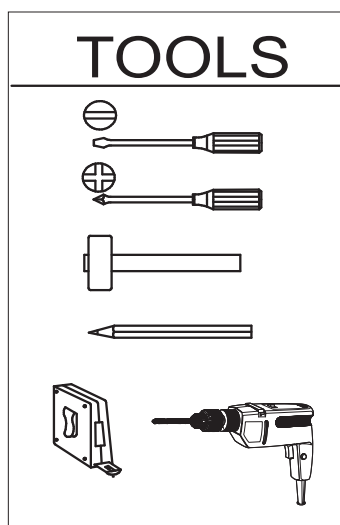



Installation shall be carried out exactly according to the manufacturer's instructions-otherwise a safety risk can occur if incorrectly installed; **WARNING** In order to prevent overturning this product must be used with the wall attachment device provided.

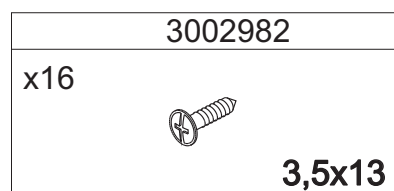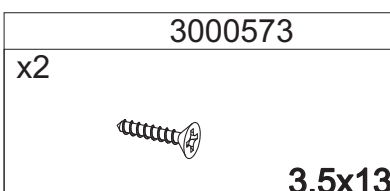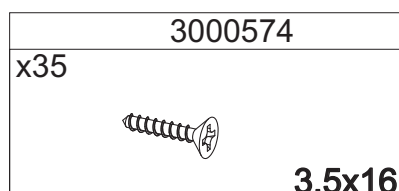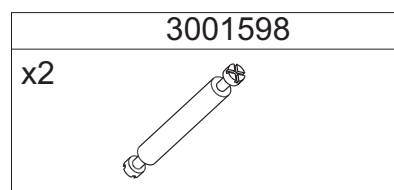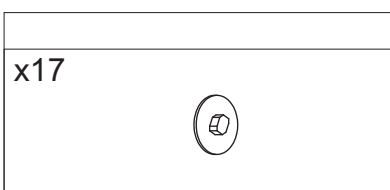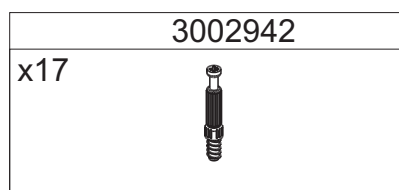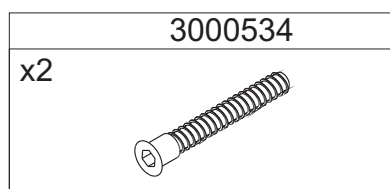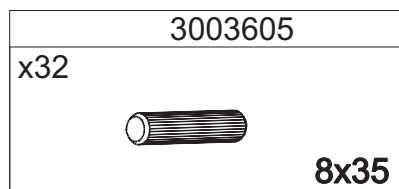

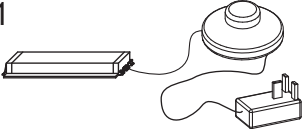3000354 x4 	3000344 x16 	3000406 x6 
3002892 x1 	3003843 x21  3x20	3002435 x15 
3003464 x2  L-1820 mm	3003378 x4 	3003377 x4 
3000331 x1 	3008099 x4  L-1164 mm	3005942 x2   
3005942 x1 	3008098 x2 	3000214 x1 
3005038 x4 	3005411 x8  4x16	


1

x9 	x8  3x13	x2  L-1164 mm
---	---	---

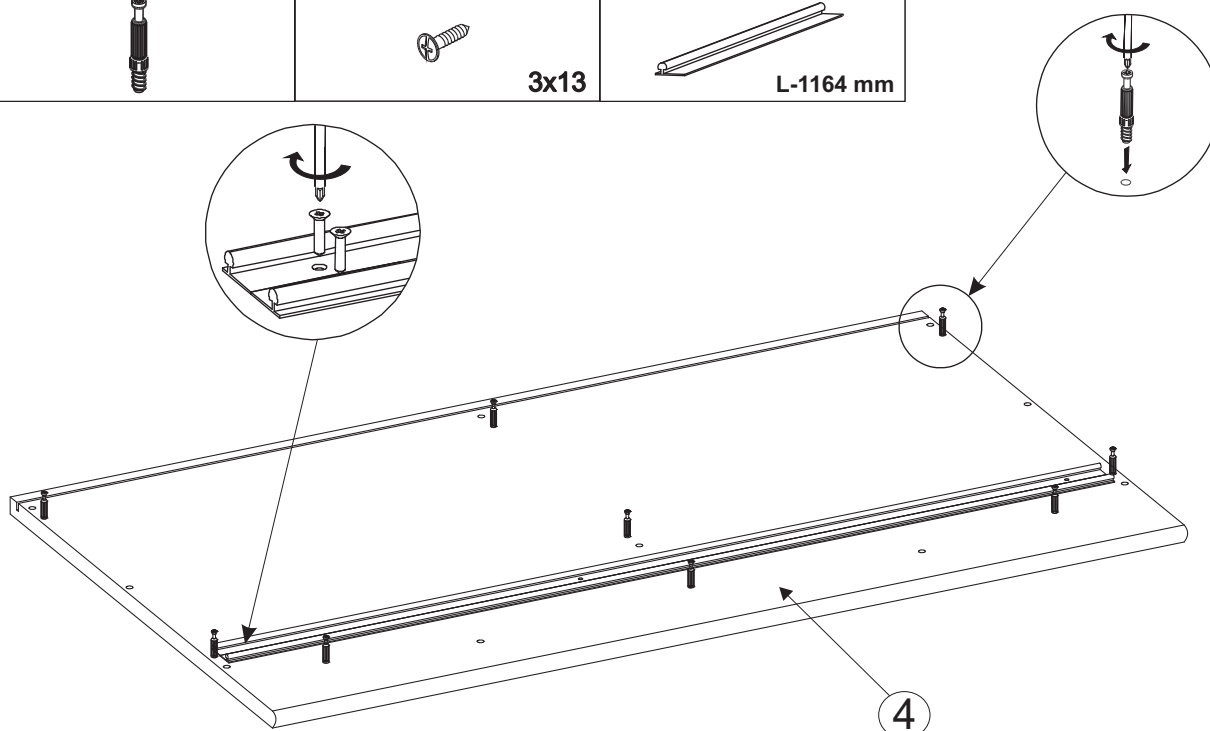


2

x6  8x35	x4 	x8 	x4 
x2  3,5x16	x2 		

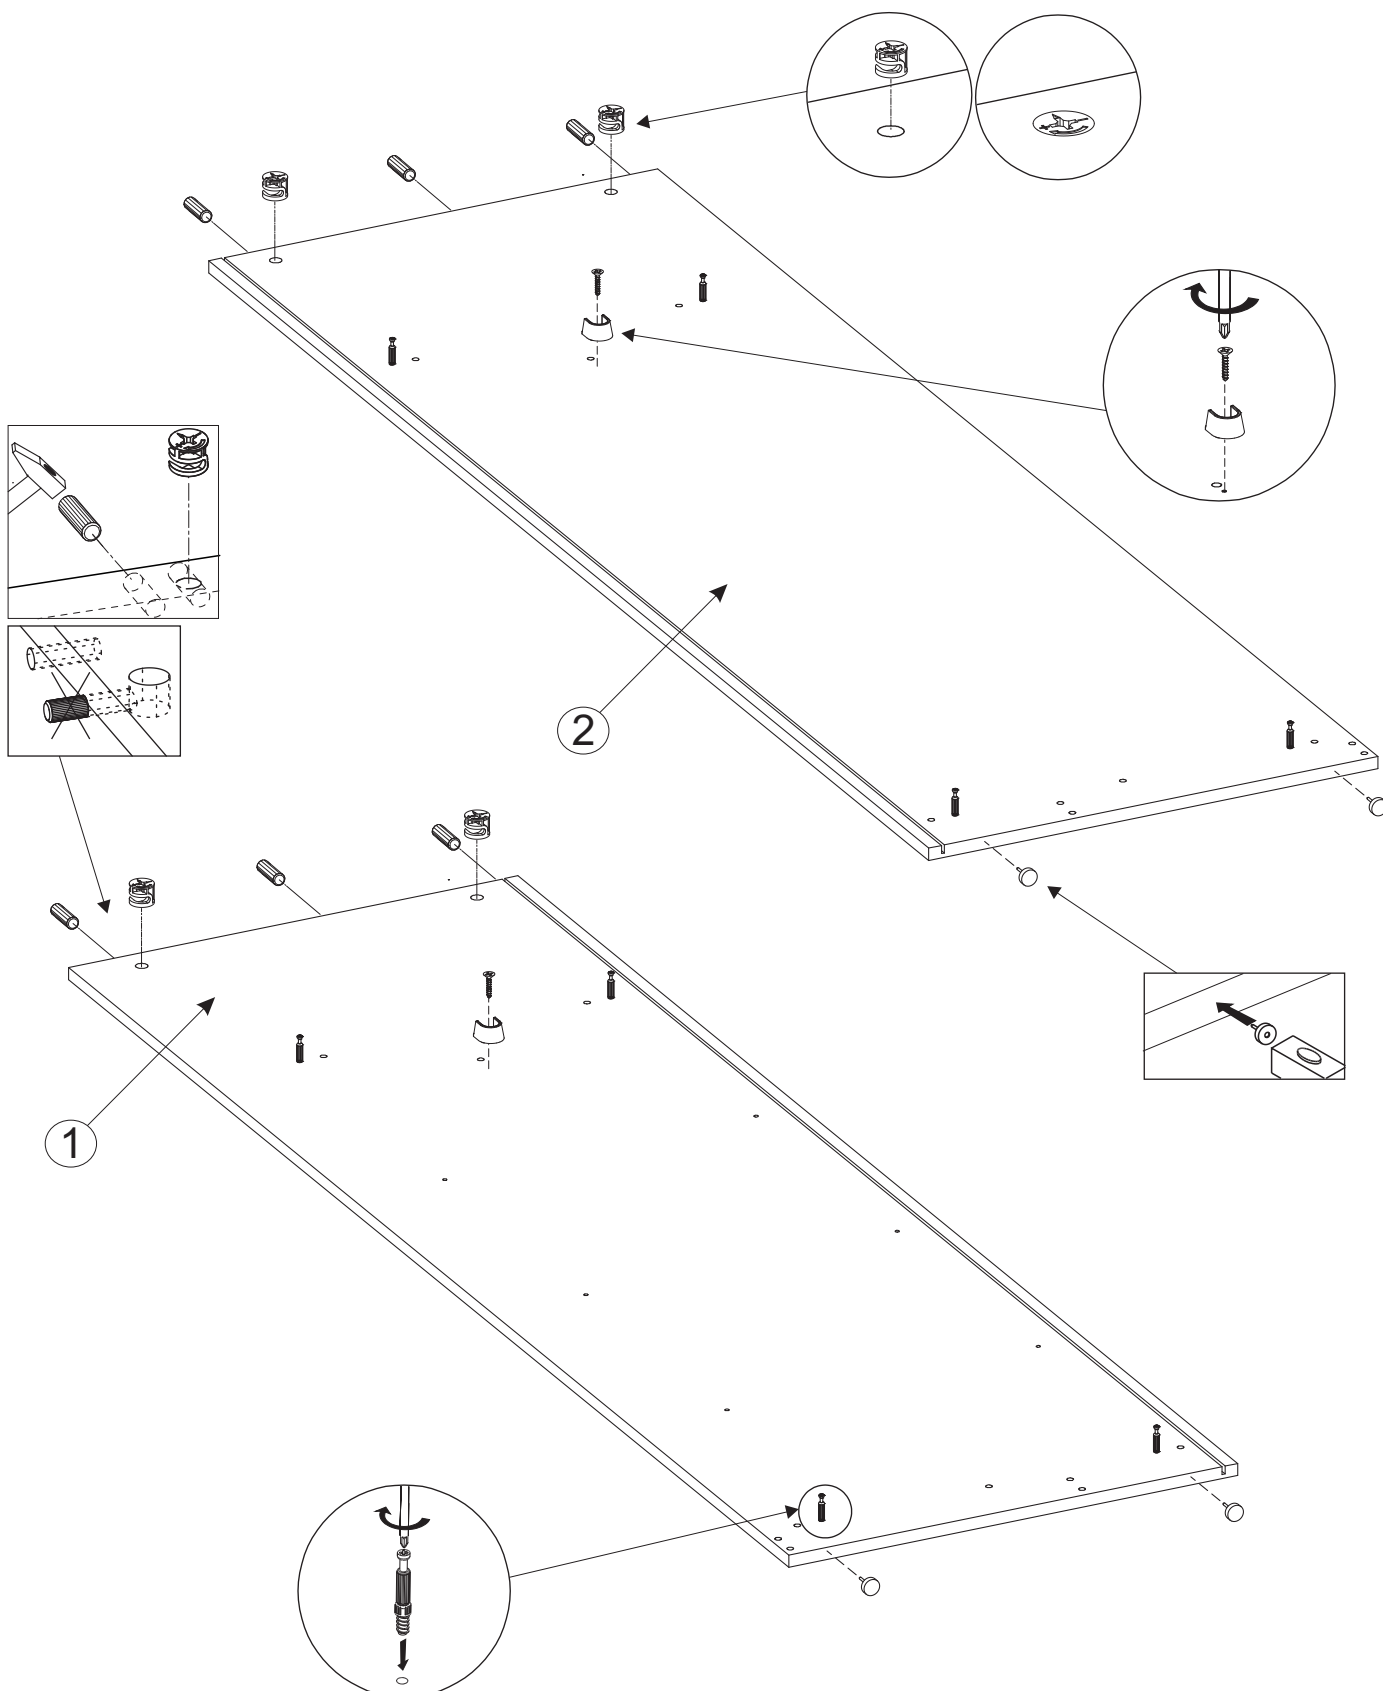


3

x8	x10	x2	x2
 8x35		 3,5x13	
x1			
			

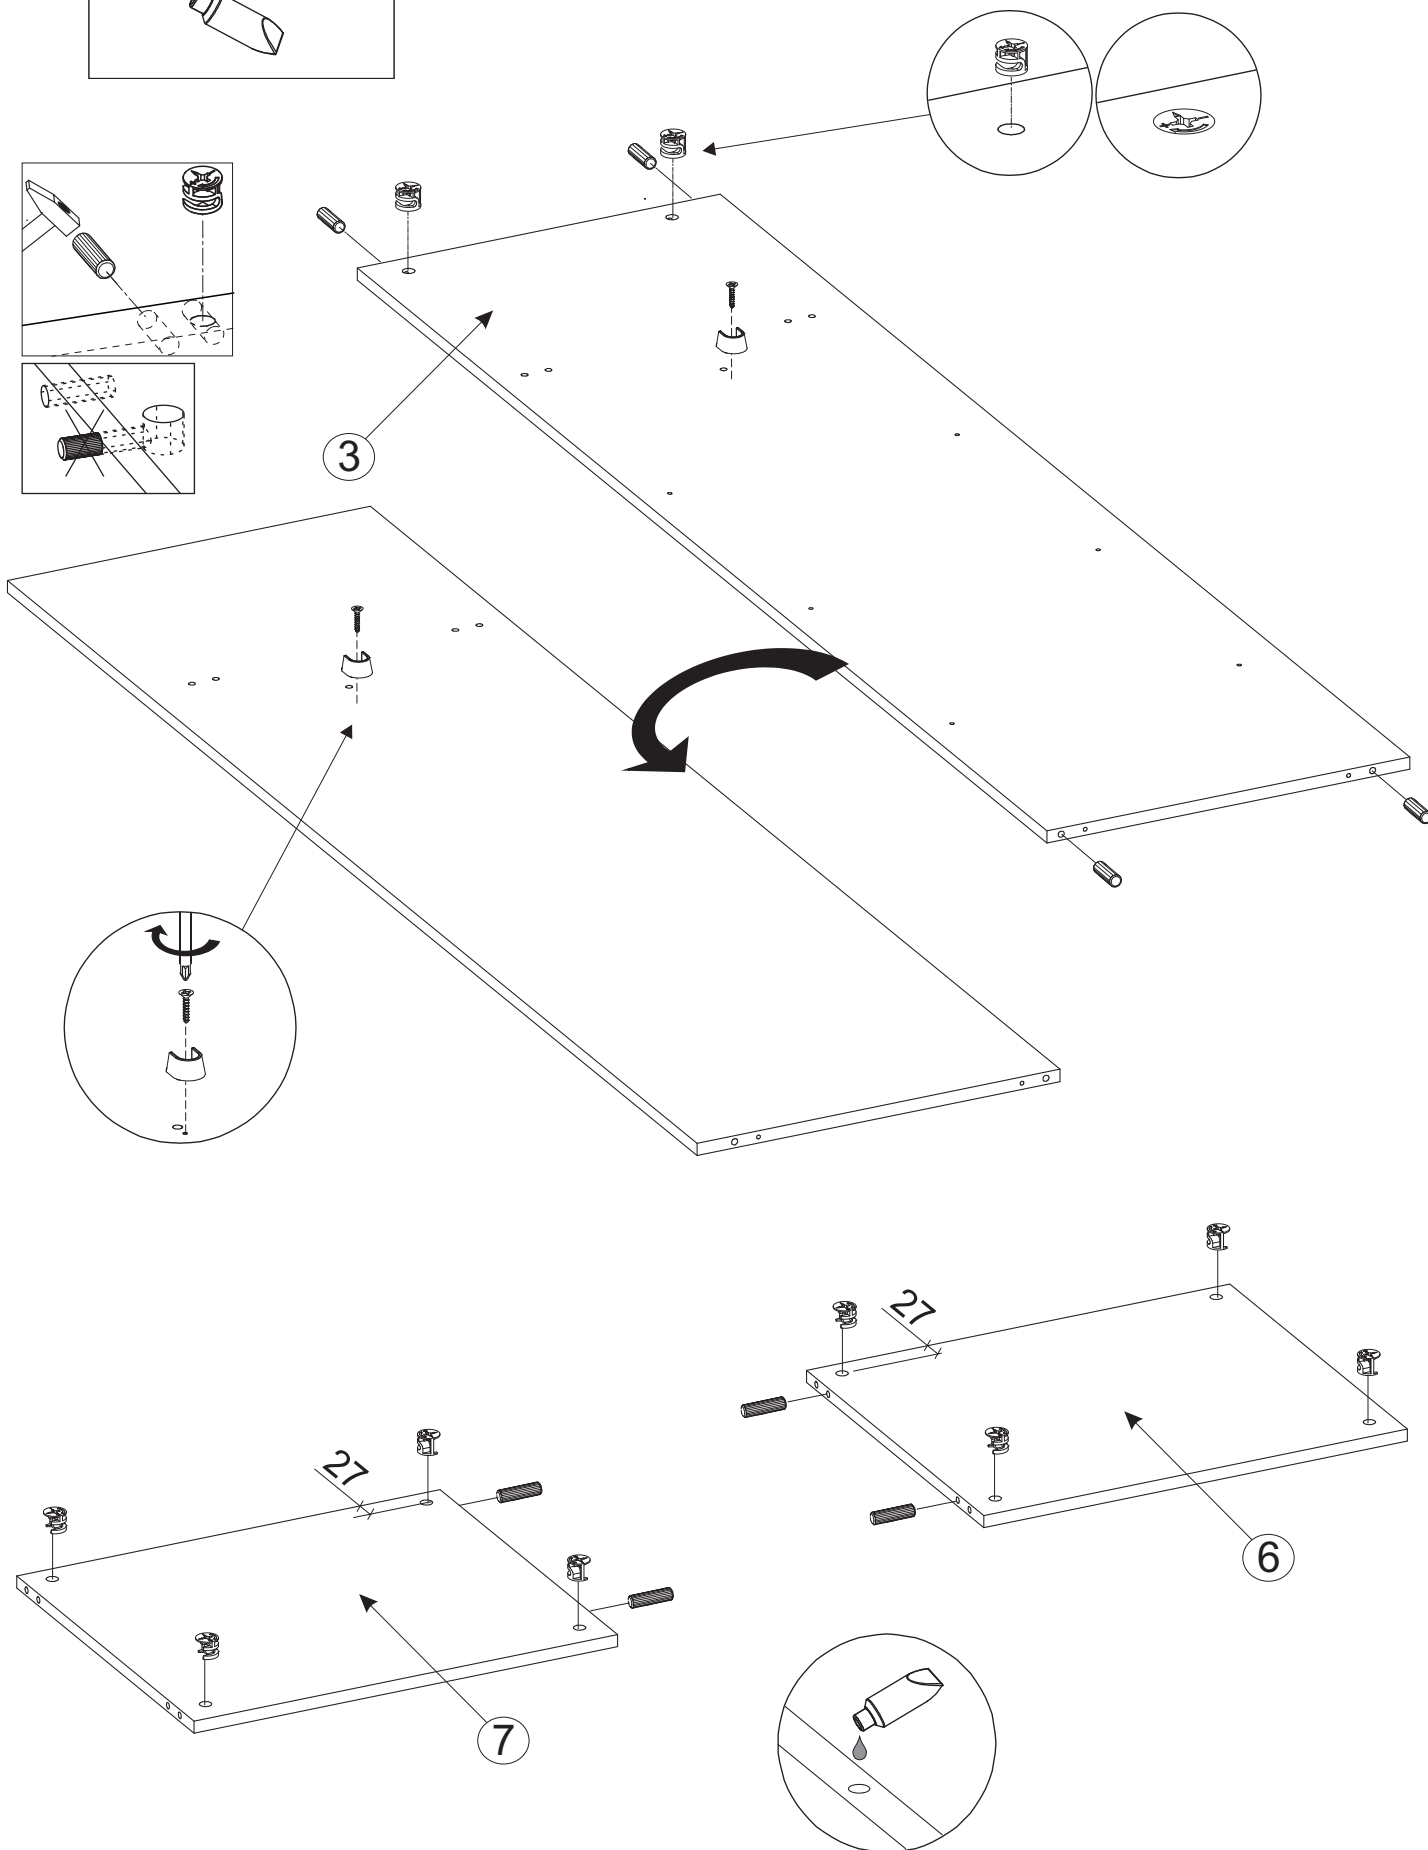


4

x6	x4	x8	x2
			
8x35		3x13	L-1164 mm
x1			
			


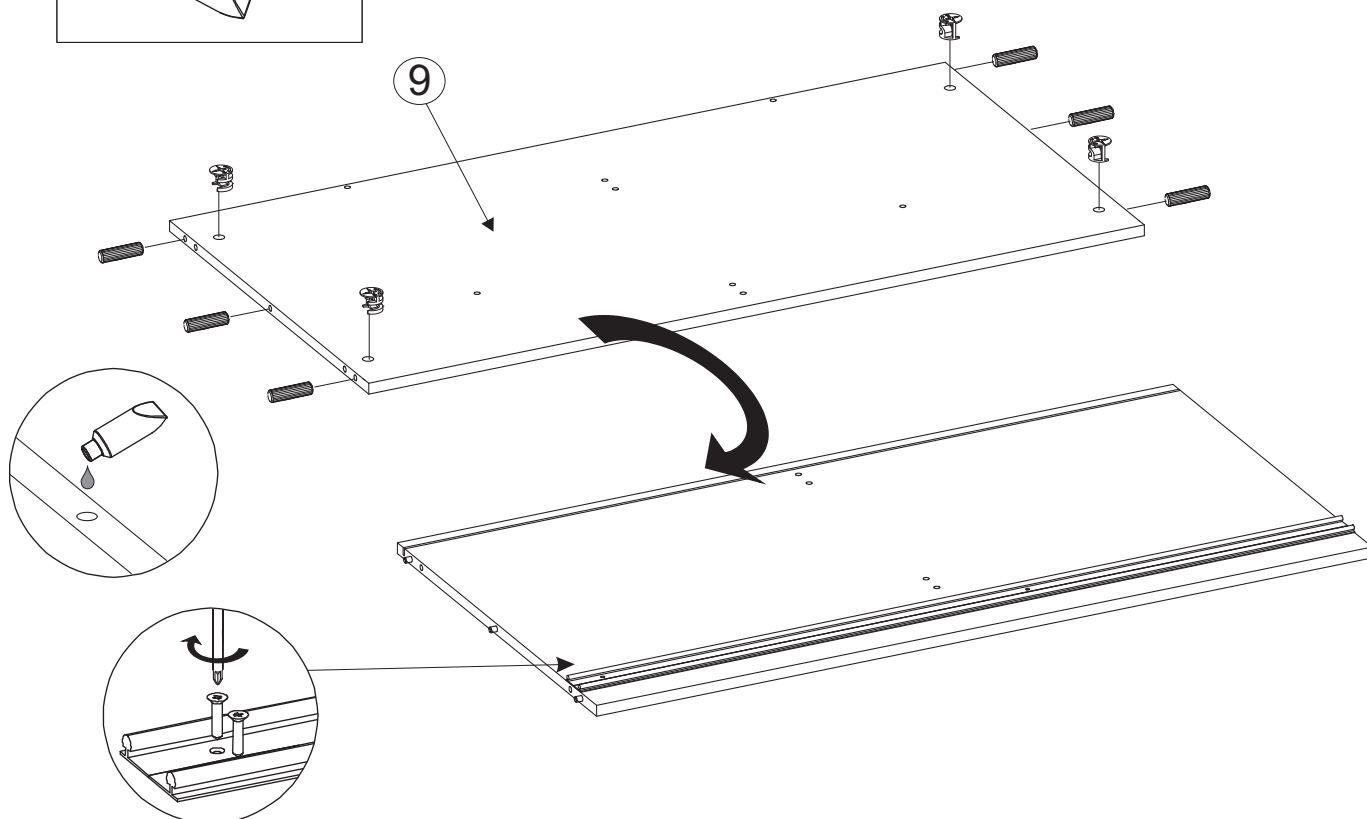







5

x12	x3	x2
		
8x35		
x1		
		

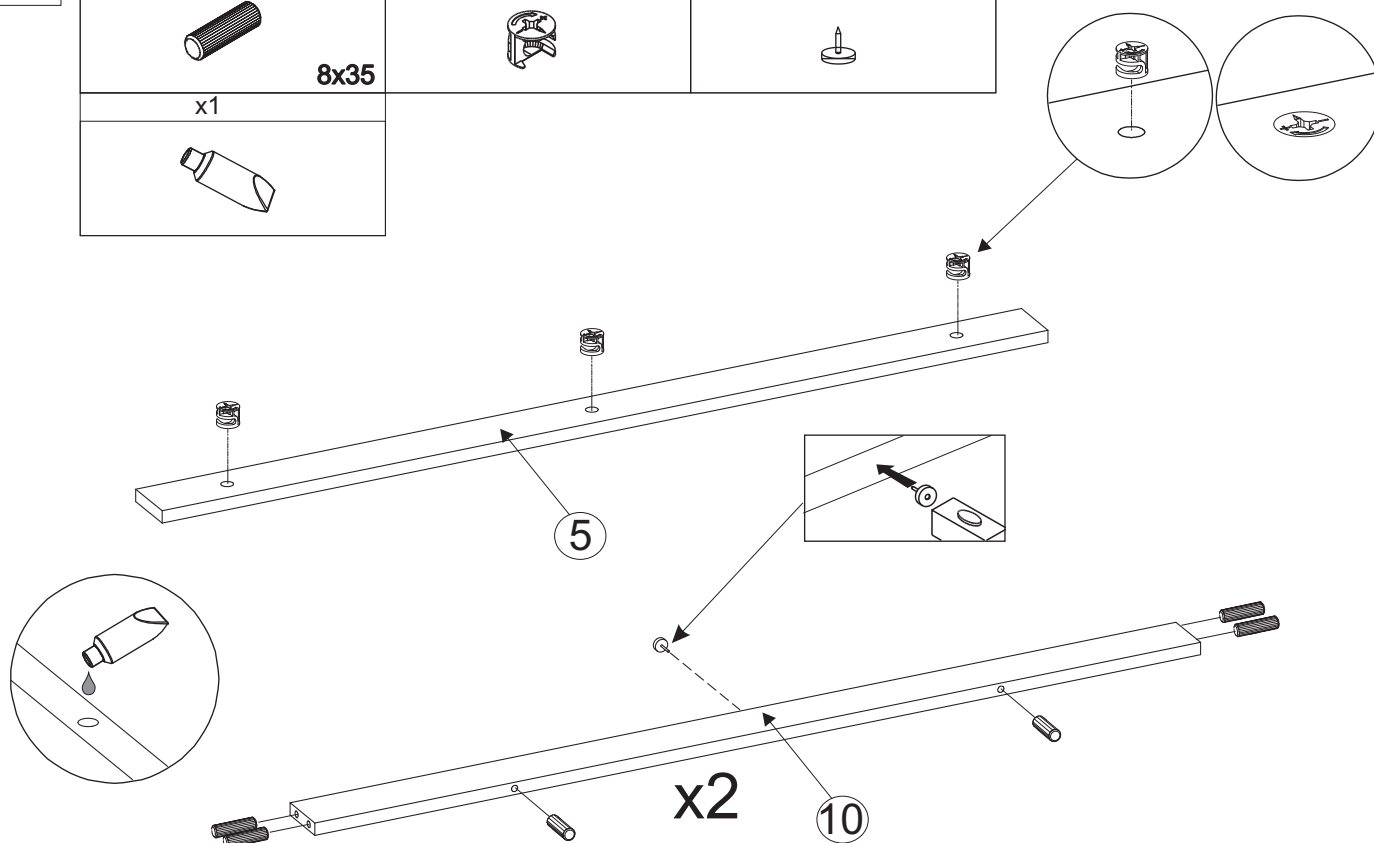



6

x2	x2	x1	x4
 8x60			
x1			
			

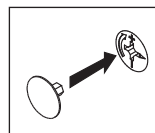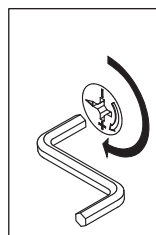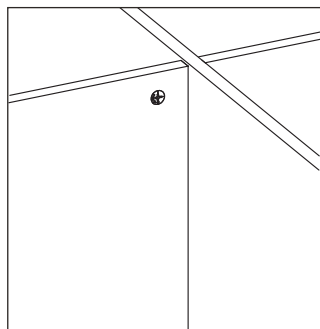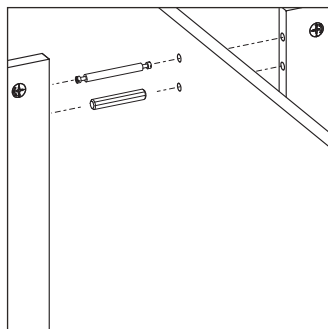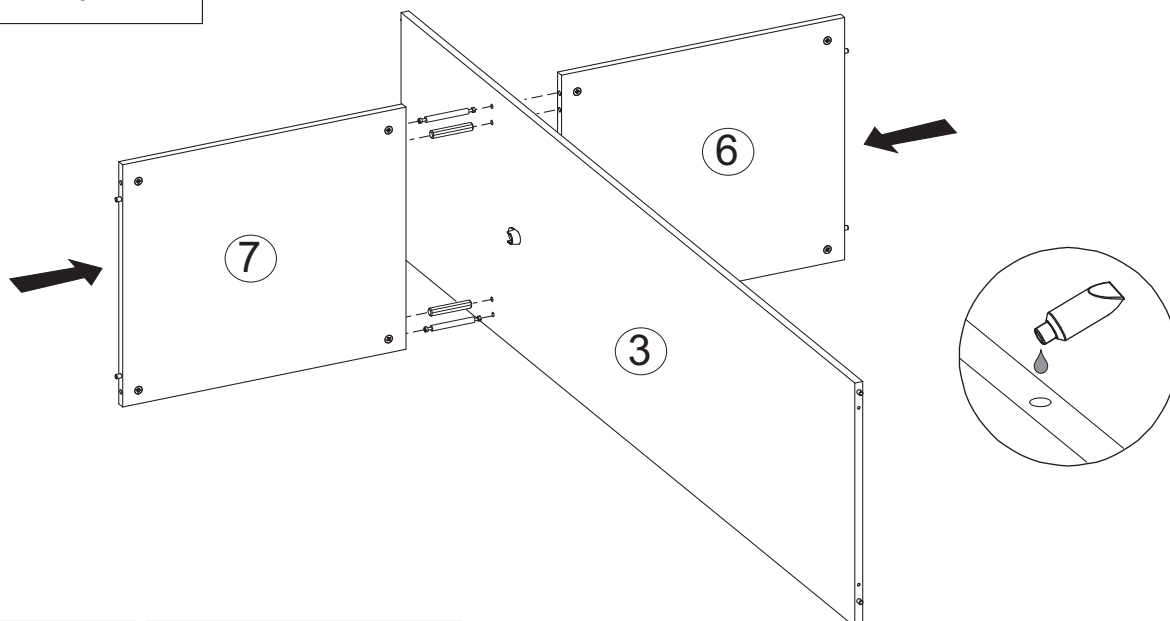


7

x1

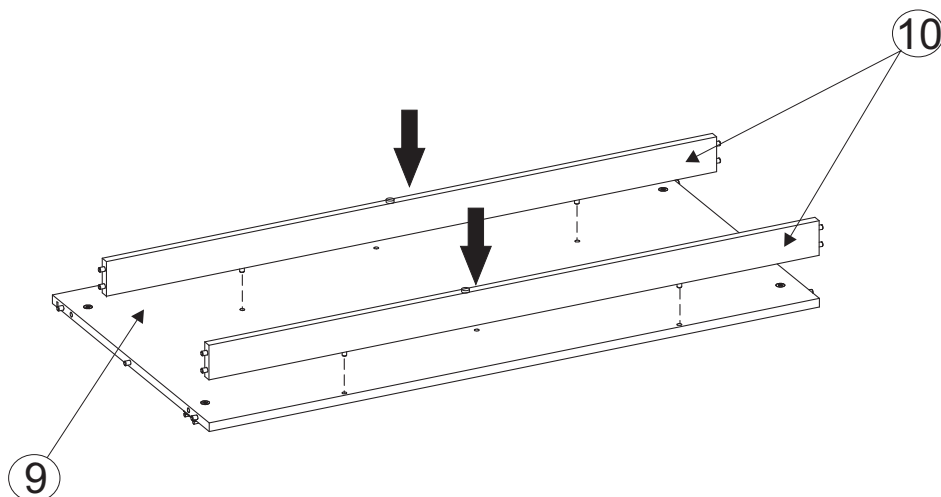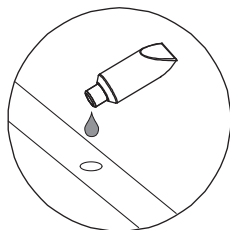
8

x2	x1
	

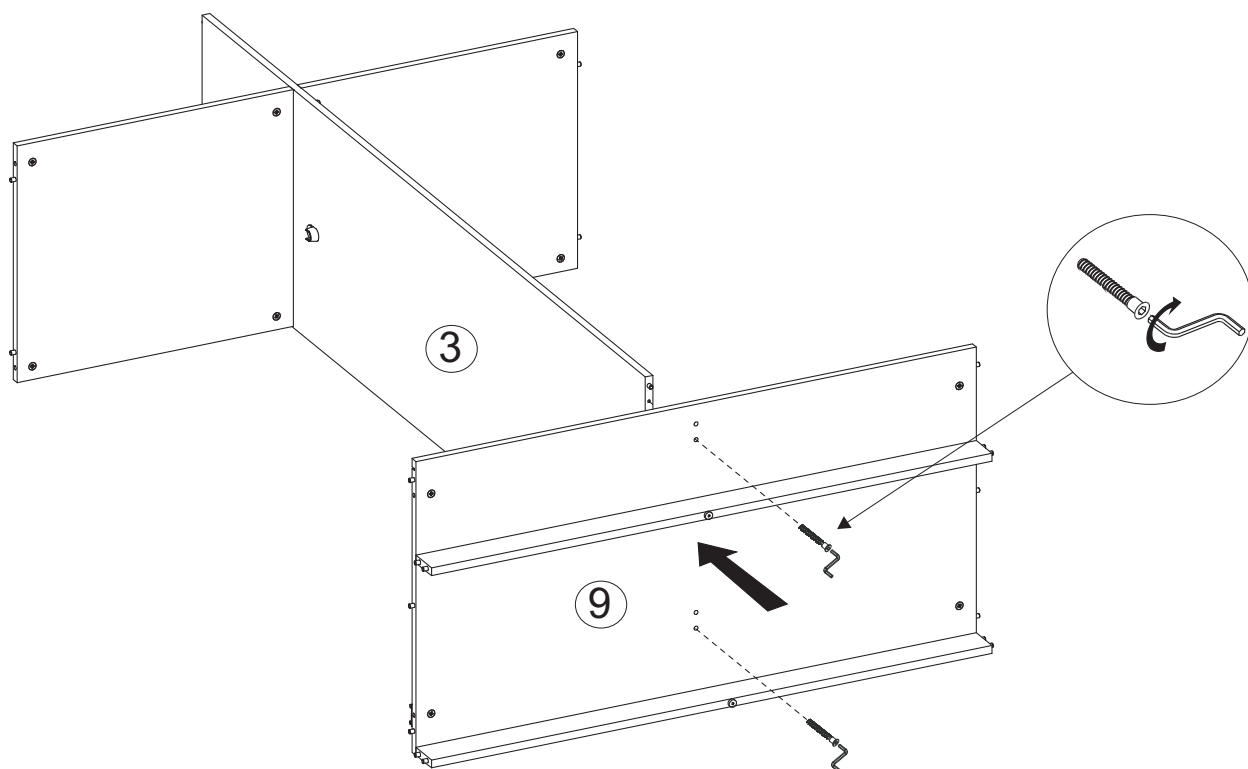



9

x4	x1
	
x1	
	

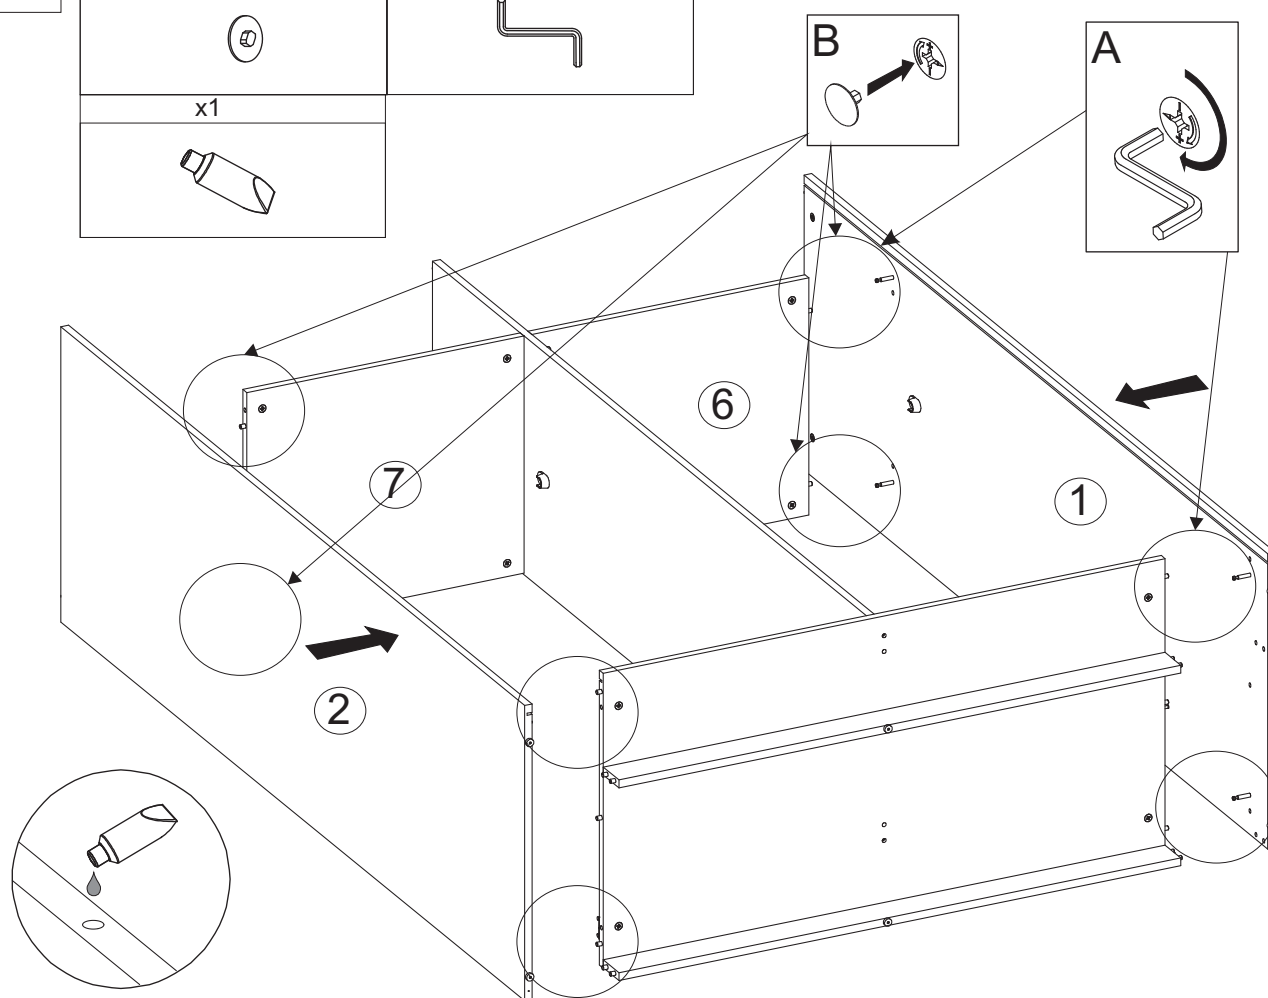




10

x4	x8
	
	4x16

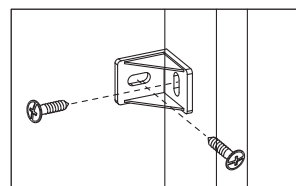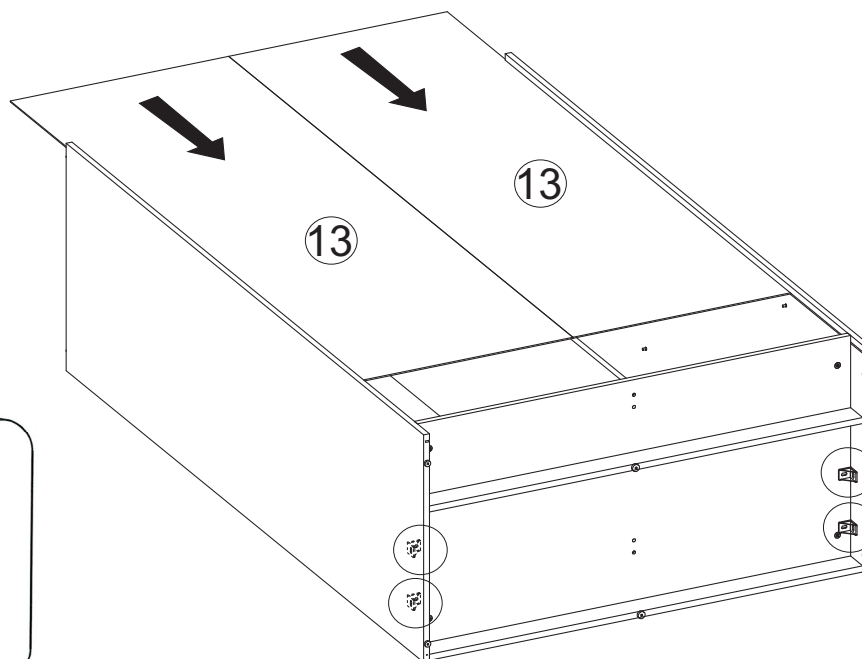

11

x9	x1
	


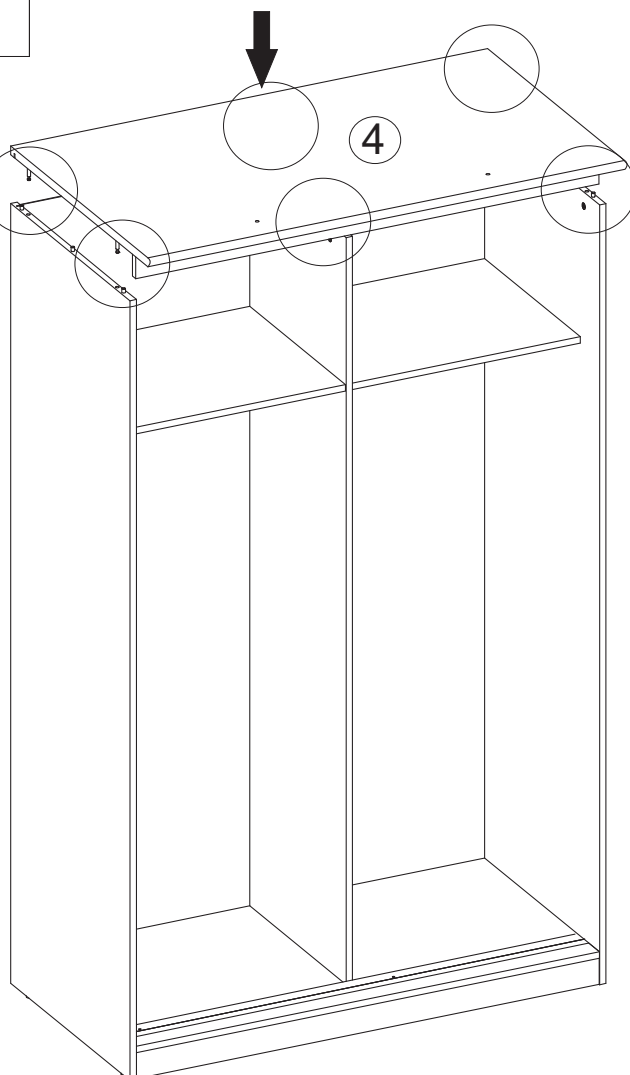
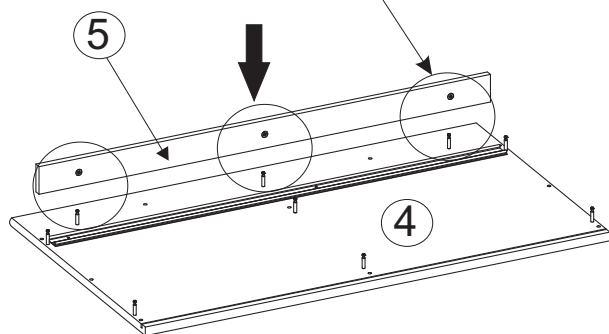
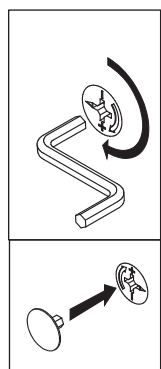


12

x16	x15	x21
		
		3x20






A=B

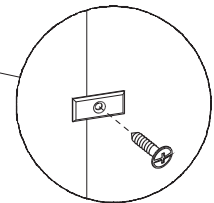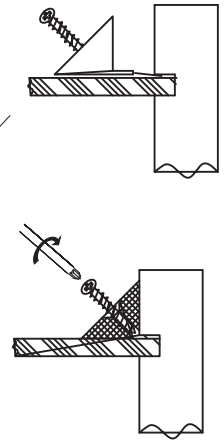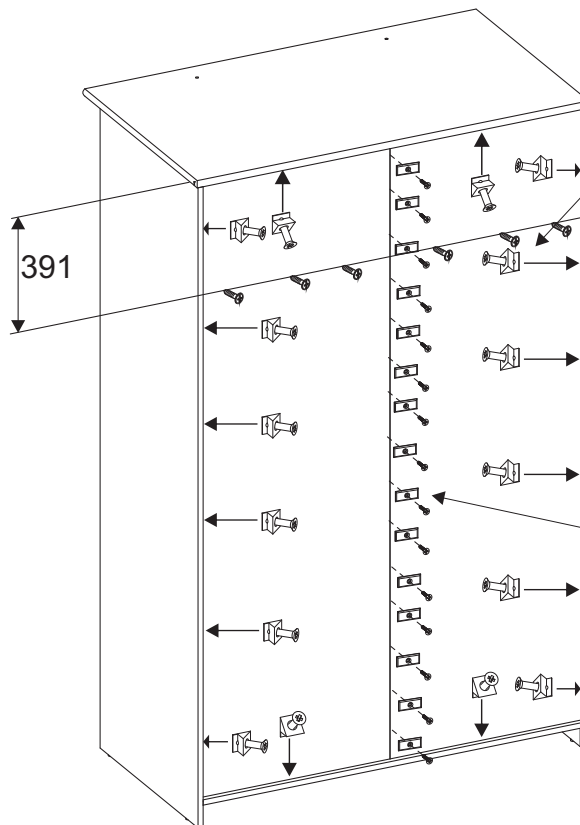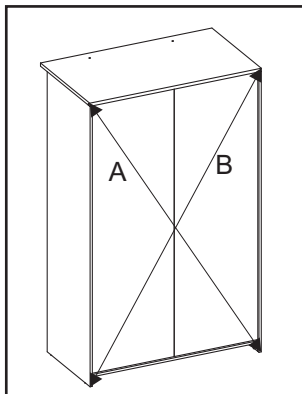

13




x1	x1	x2
		
	3,5x16	

Installation shall be carried out exactly according to the manufacturer's instructions-otherwise a safety risk can occur if incorrectly installed; **WARNING** In order to prevent overturning this product must be used with the wall attachment device provided.

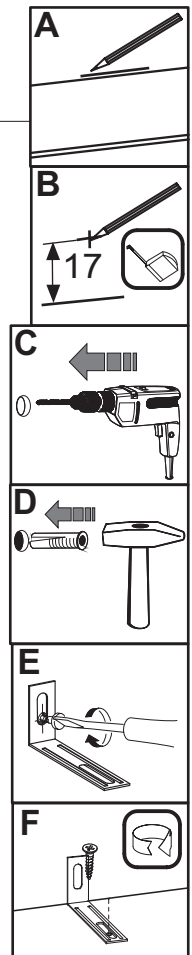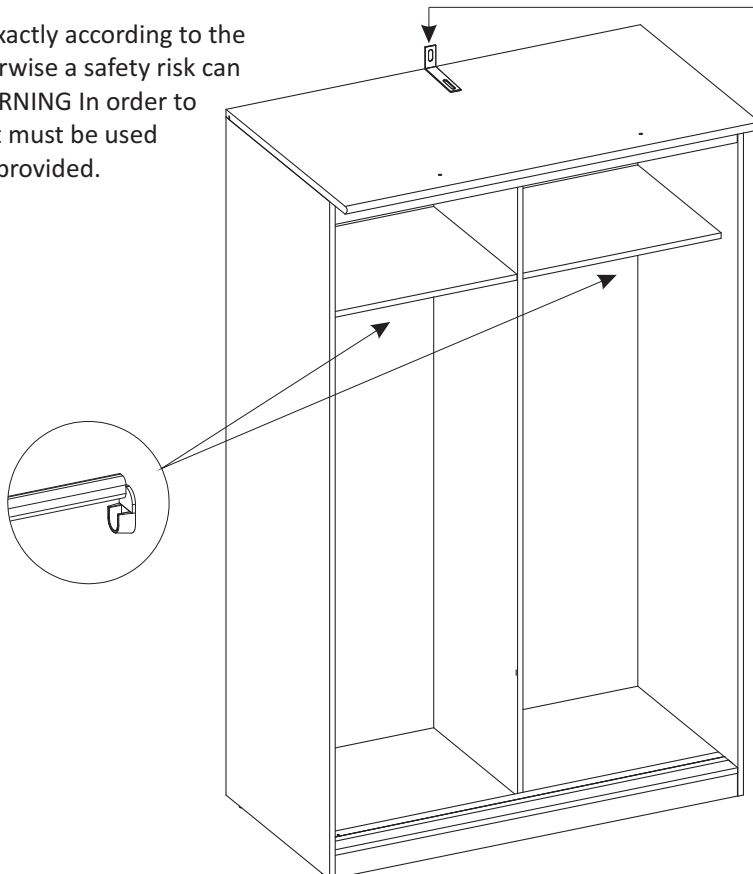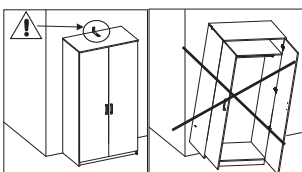

14





x32	x4	x4
		
3,5x16		

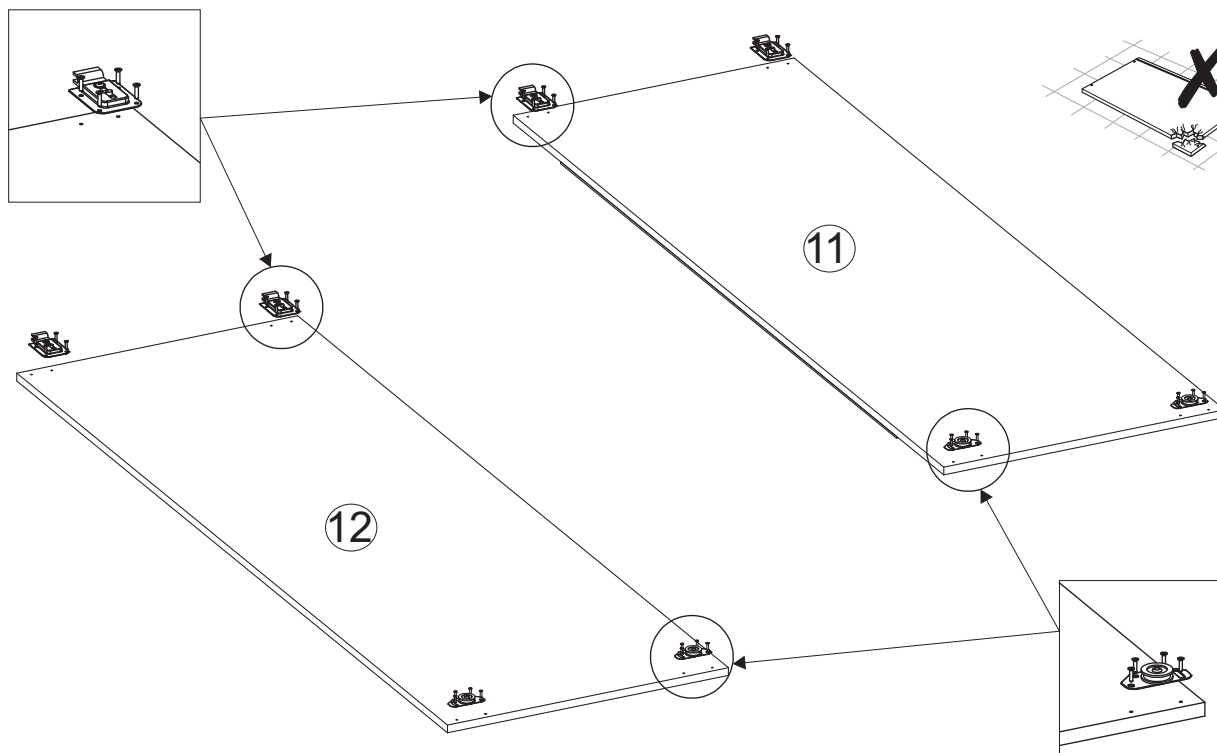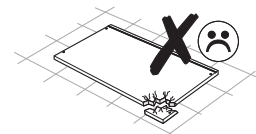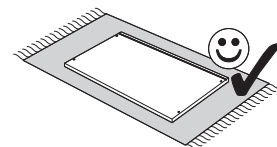

15


x2

L-1820 mm

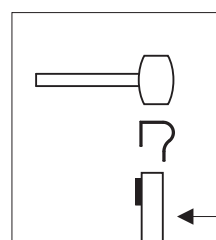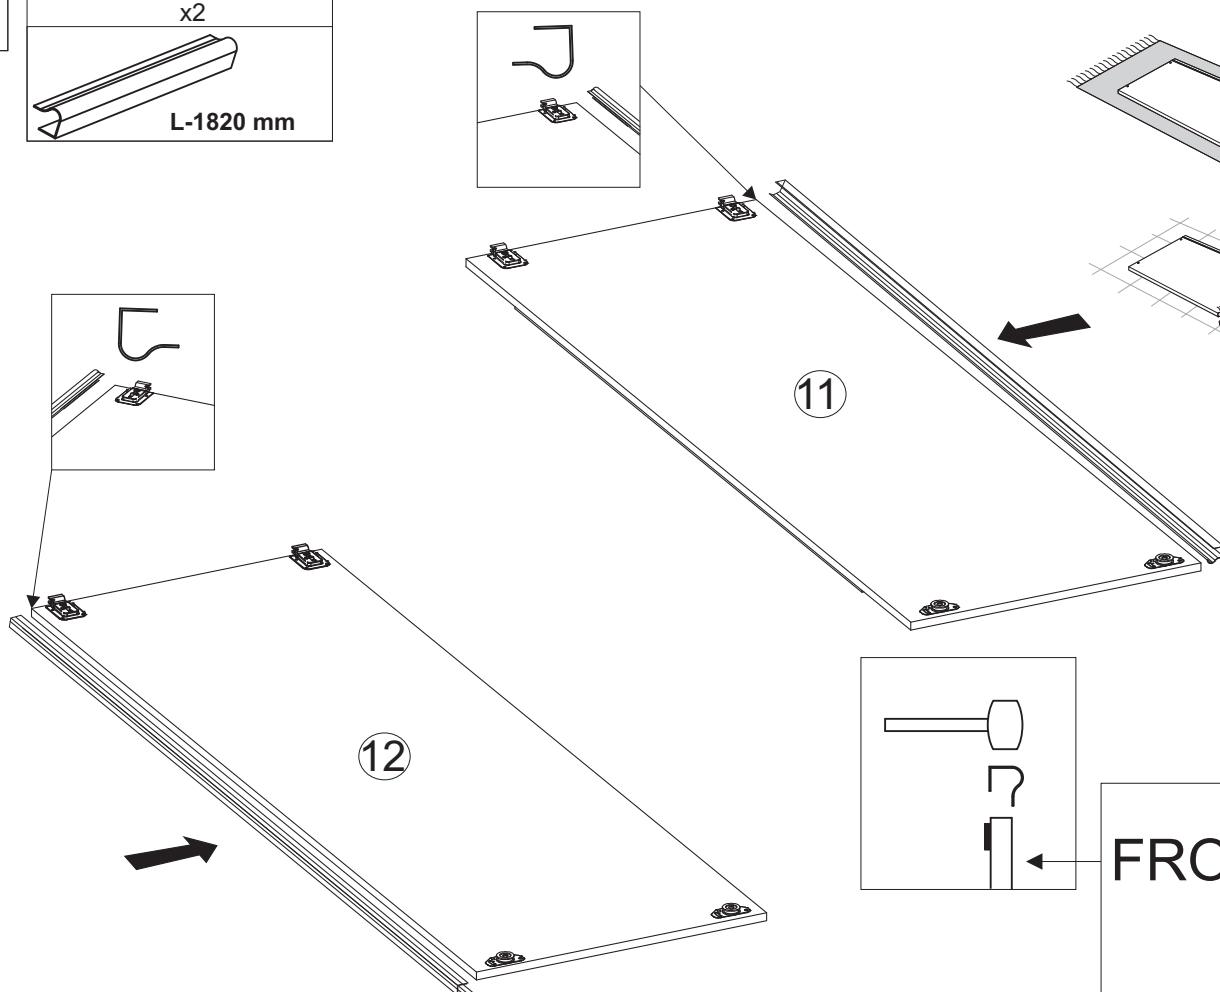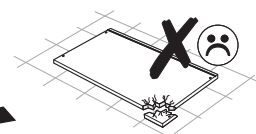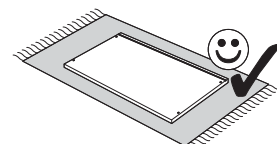


FRONT


16

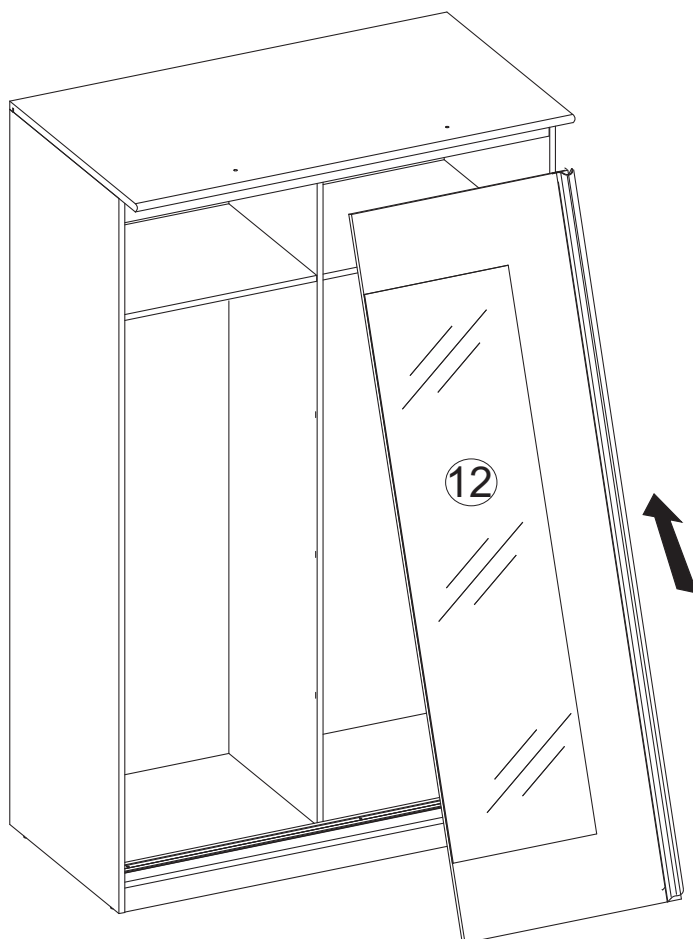


17

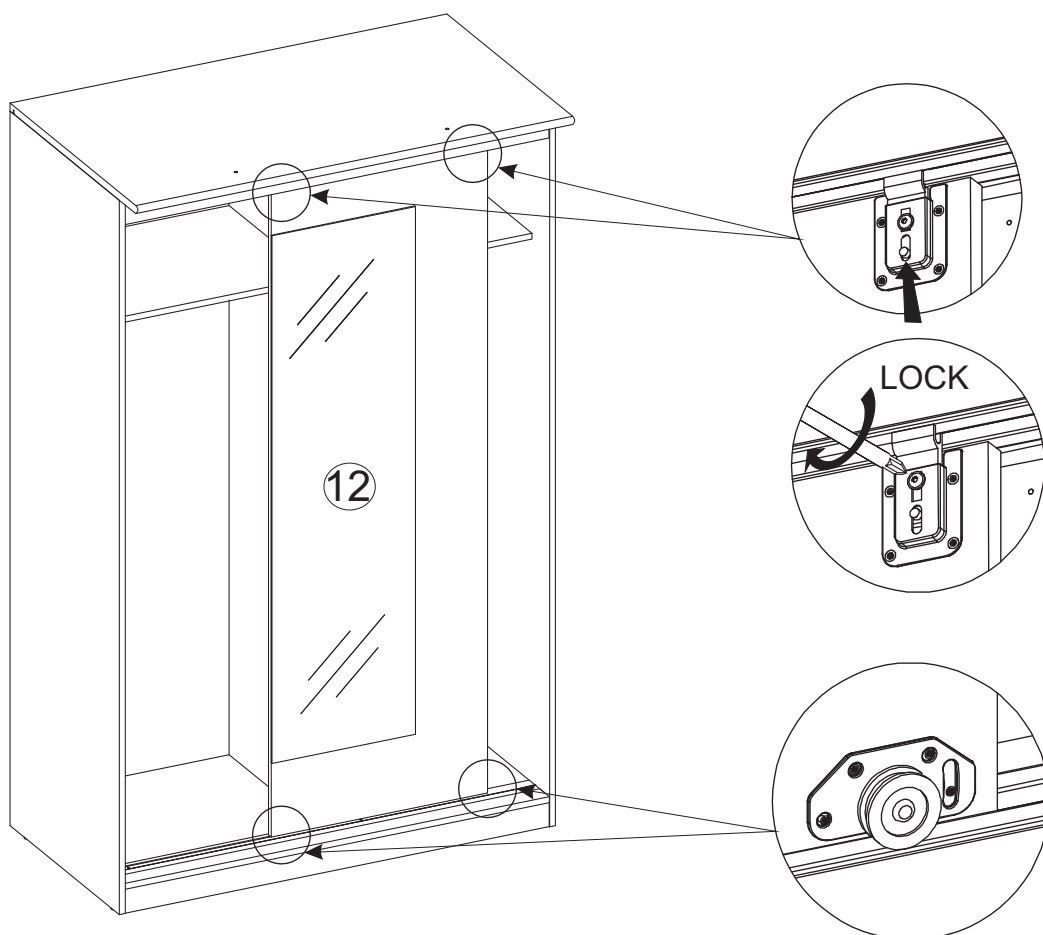


18

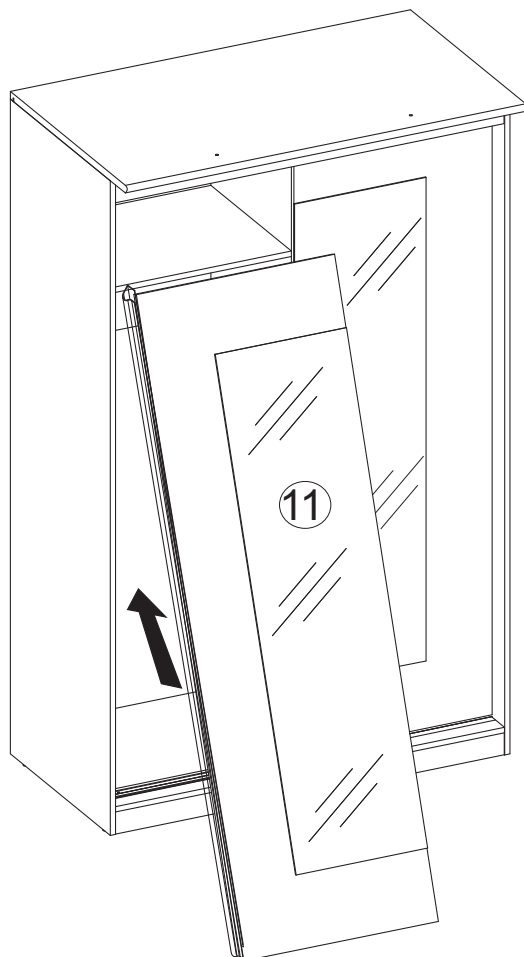



19

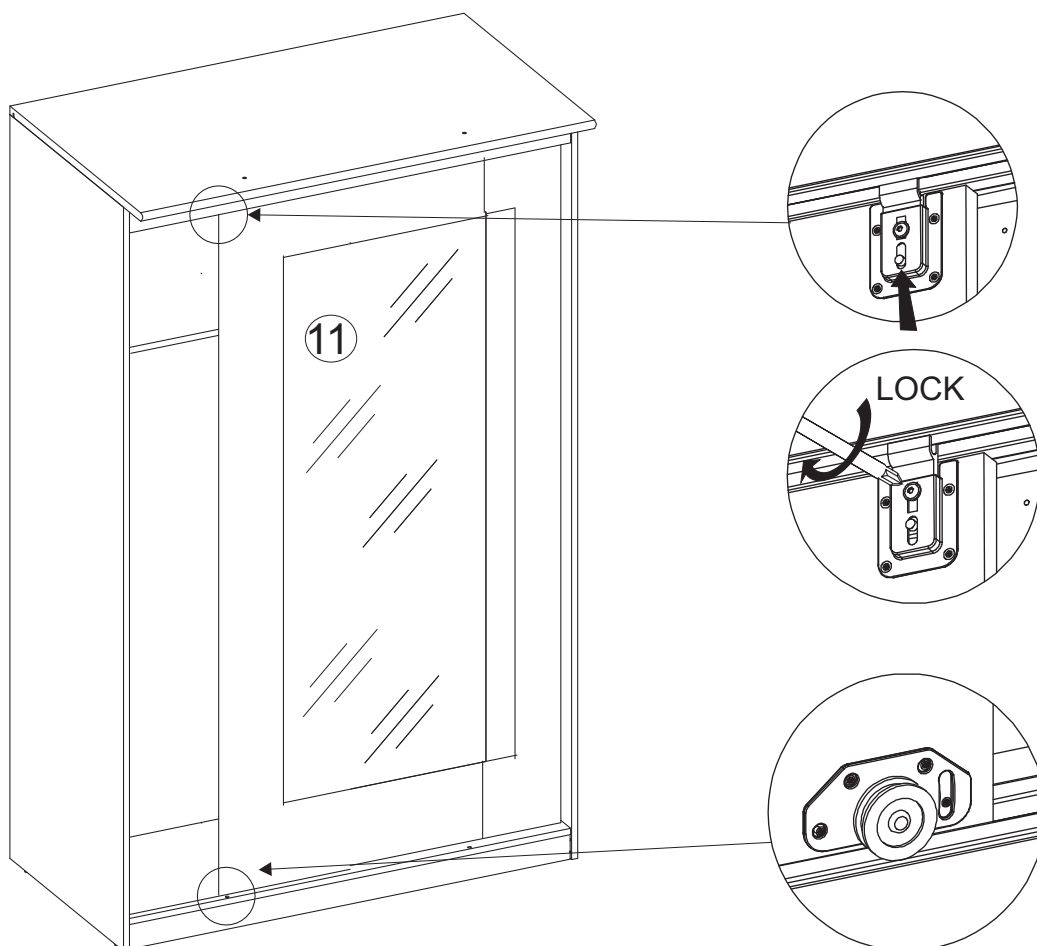

20

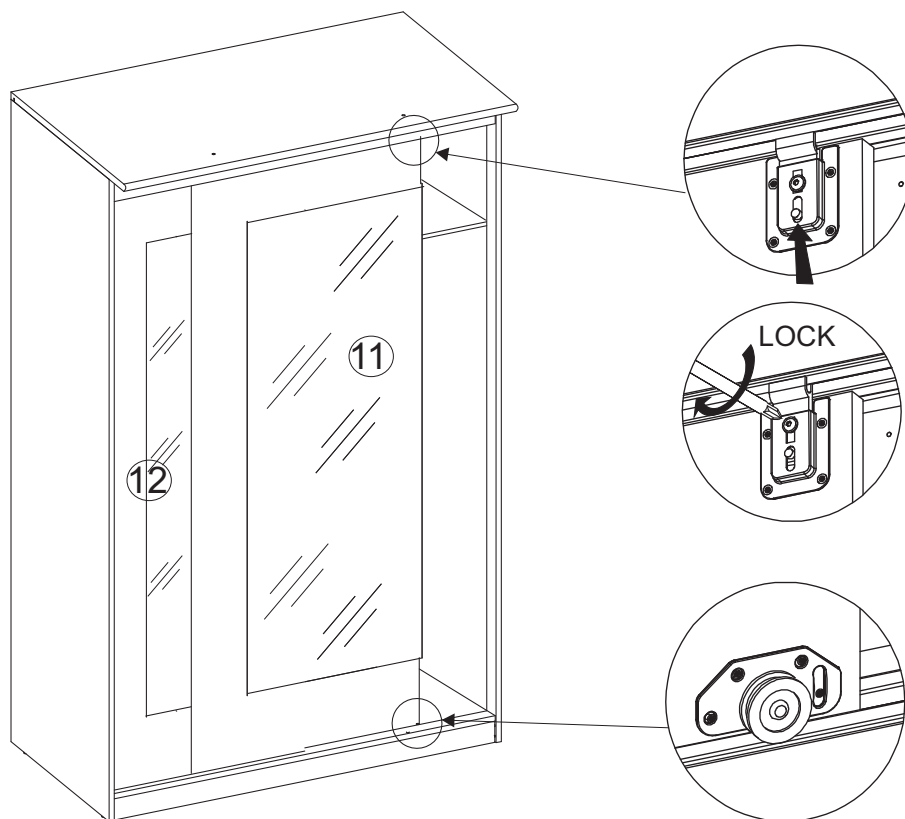

21

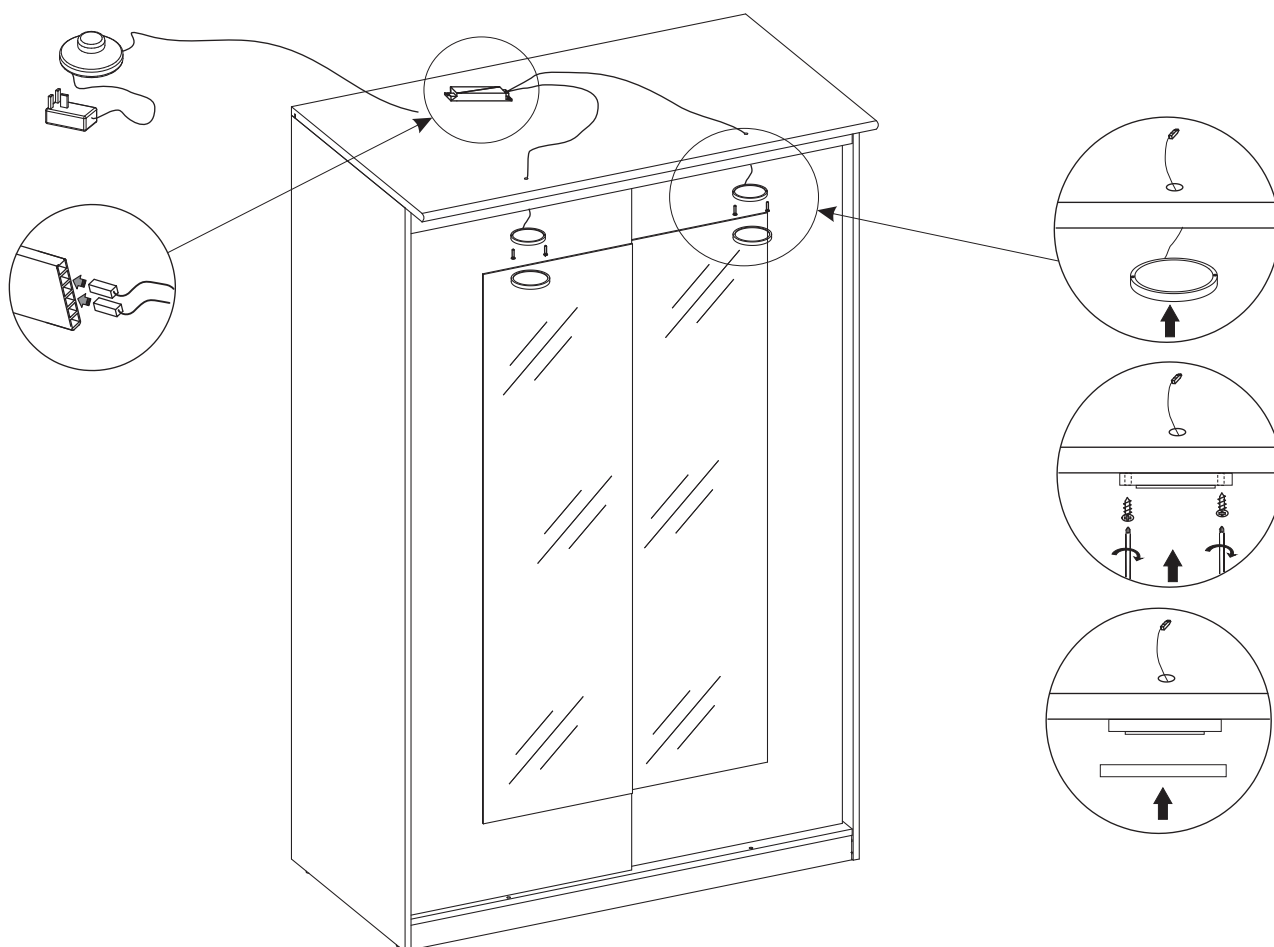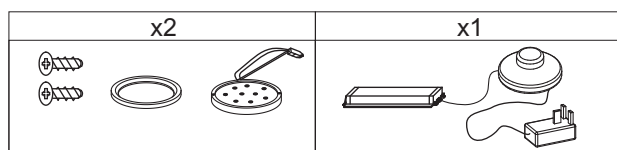

You have now completed the assembly of your furniture, we trust it will serve you well in the future. We recommend that bolts and fittings are checked for tightness occasionally and that you keep this assembly guide for future reference.

Please record the BATCH number from the white carton label in the space below, this will be required in any future communication regarding this product.

BATCH NO PR:							
--------------	--	--	--	--	--	--	--